

SNES TO PSX ADAPTER



For adapter ADAP-SNES2PSX v1.3 and up

button mappings

The following mappings were developed to accomodate a variety of games, based on their specific button assignments.

These mappings are enabled by pressing and holding the respective activation button on the SNES controller on power-up.

SNES	TYPE 1	TYPE 2	TYPE 3	TYPE 4	TYPE 5	TYPE 6	TYPE 7
B	X	O	Triangle	Square	O	X	X
Y	Square	X	O	X	Triangle	Square	Square
A	O	R2	X	Triangle	Square	O	O
X	Triangle	Triangle	Square	O	X	Triangle	Triangle
R	R1	R1	R1	R1	L1	R2	L1
L	L1	Square	L1	L1	R1	L2	R1
Start	Start	Start	Start	Start	Start	Start	Start
Select	Select	Select	Select	Select	Select	Select	Select
Up	Up	Up	Up	Up	Up	Up	Down
Down	Down	Down	Down	Down	Down	Down	Up
Left	Left	Left	Left	Left	Left	Left	Right
Right	Right	Right	Right	Right	Right	Right	Left
ACTIVATION	Default	Select	A	B	X	Y	L

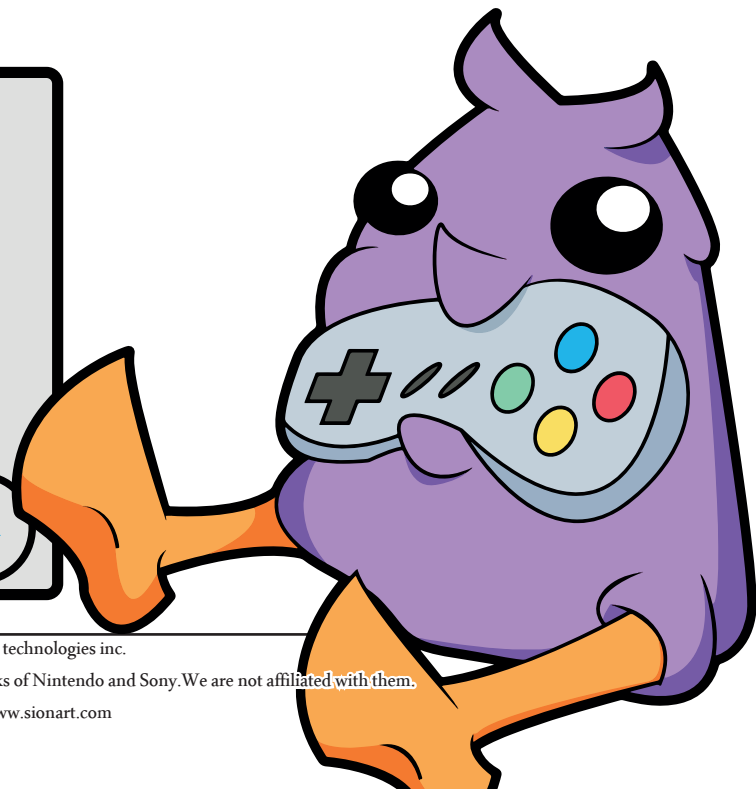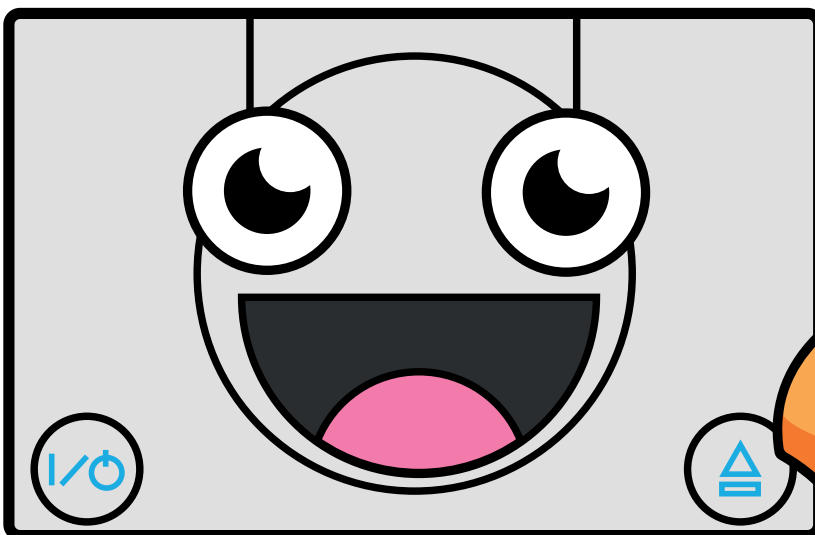

Copyright (C) 2014 raphnet technologies inc.

Nintendo, Super Nintendo and Playstation are registered trademarks of Nintendo and Sony. We are not affiliated with them.

Art and design by Sion: www.sionart.com