



SNES TO PSX ADAPTER

For adapter ADAP-SNES2PSX v1.3 and up

モードの有

選んだモードを有効にするため、対応するボタンを押しながら、機械の電源を点けて下さい。

SNES	TYPE1	TYPE2	TYPE3	TYPE4	TYPE5	TYPE6	TYPE7
B	X	O	Triangle	Square	O	X	X
Y	Square	X	O	X	Triangle	Square	Square
A	O	R2	X	Triangle	Square	O	O
X	Triangle	Triangle	Square	O	X	Triangle	Triangle
R	R1	R1	R1	R1	L1	R2	L1
L	L1	Square	L1	L1	R1	L2	R1
Start	Start	Start	Start	Start	Start	Start	Start
Select	Select	Select	Select	Select	Select	Select	Select
Up	Up	Up	Up	Up	Up	Up	Down
Down	Down	Down	Down	Down	Down	Down	Up
Left	Left	Left	Left	Left	Left	Left	Right
Right	Right	Right	Right	Right	Right	Right	Left
ACTIVATION	Default	Select	A	B	X	Y	L

