



# RNT

## SNES TO ATARI-COMMODORE ADAPTER

Document rev.1 for adapter ADAP-SNES2AC

### 1. button mappings

The following mappings were developed to accommodate a variety of games, based on their specific button configurations.

These mappings are enabled by holding the activation button combinations on the SNES controller when connecting the adapter or turning the machine on.

ATARI-COMMODORE	STYLE 1	STYLE 2	STYLE 3	STYLE 4
D-up	D-up	B	A	D-Down
D-Down	D-Down	D-Down	D-Down	D-up
D-Left	D-Left	D-Left	D-Left	D-Right
D-Right	D-Right	D-Right	D-Right	D-Left
Fire/Btn1	A/B	A	B	B
Auto Fire/Btn1	Y/R	Y/R	Y/R	Y/R
Btn 2	X/L	X/L	X/L	X/L

MAPPINGS	ACTIVATION
Style 1	Default
Style 2	Hold B
Style 3	Hold A
Style 4	Hold X

### 2. hints

- Six different turbo speeds (30Hz, 25Hz, 20Hz, 16.667Hz, 15Hz and 12.5Hz) are available and cycled through by pressing the SELECT button. The default is 25Hz.
- Pressing START enables/disables the auto-fire lock feature. When auto-fire lock is active, button 1 auto-fire runs continuously without the need to hold any button down.

